










REALITY

modern furniture

6531


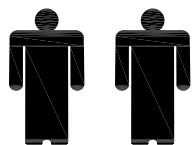


-Bitte prüfen Sie in regelmäßigen Abständen den festen Sitz der Schrauben!
 -Please often inspect screws if slack because it is K/D construction!

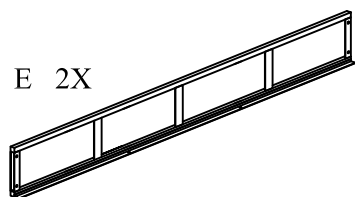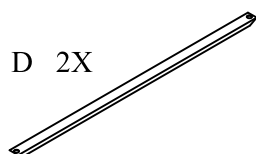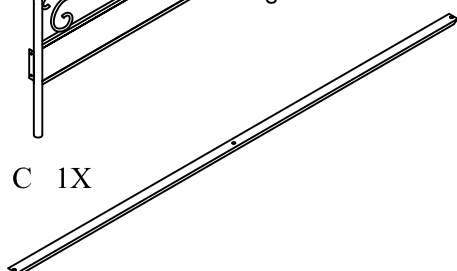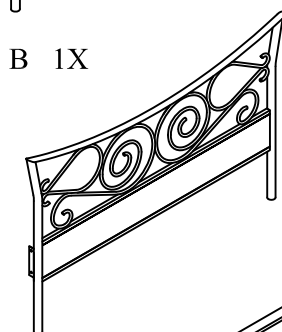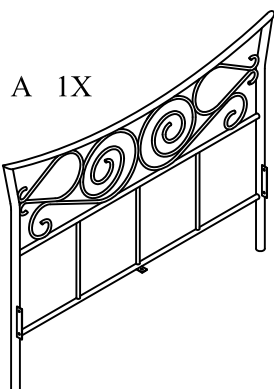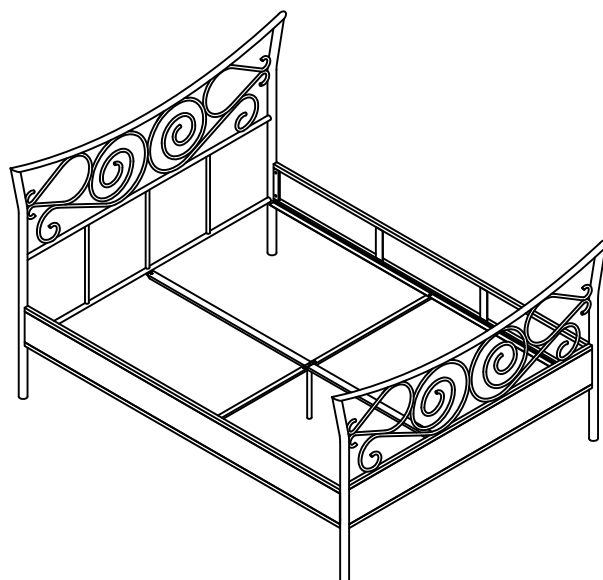


H		M6x40mm	1
I		M6x22mm	2
J		M6x12mm	4
K		M8x16mm	8
L		M6	2
M		M8	8
N		M8*17mm	8
O		M6x45mm	1
P			1
Q		M4	1
R		M5	1

75%


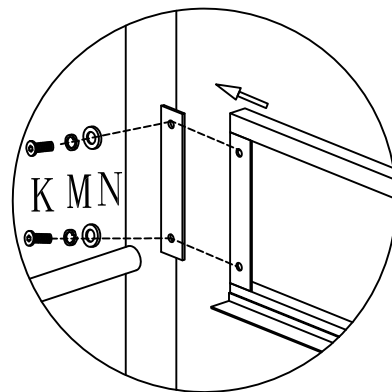
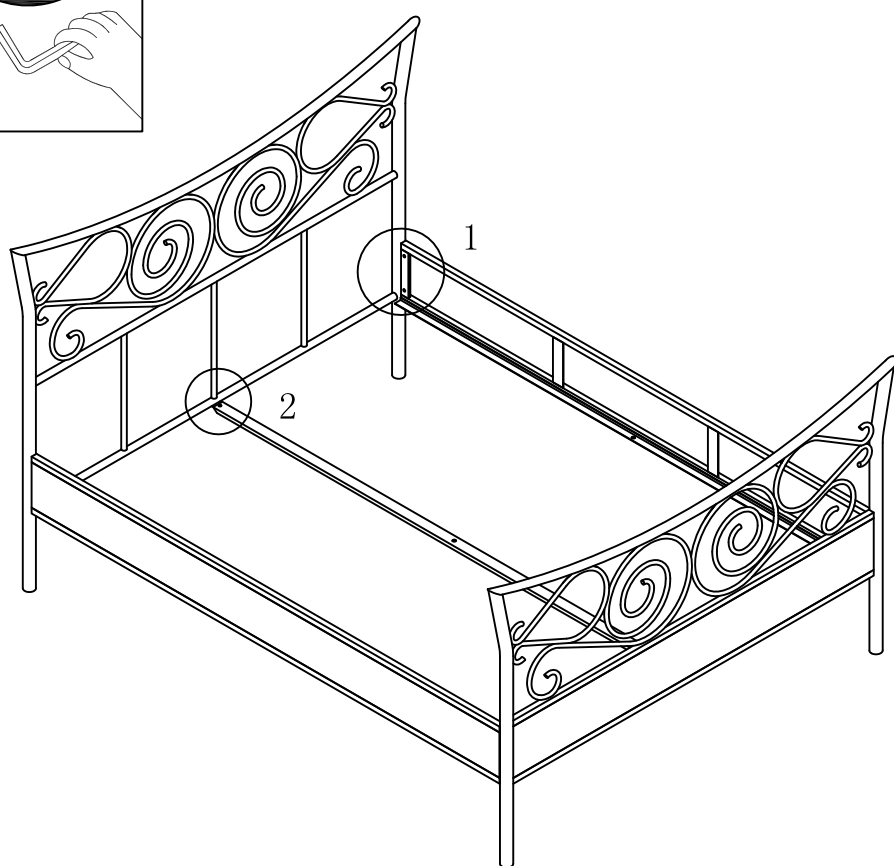


1

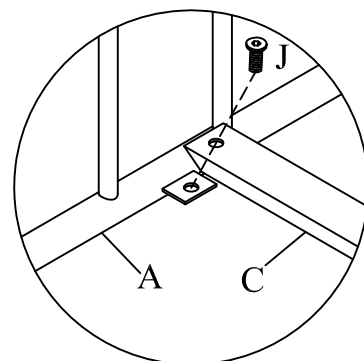


2

100%

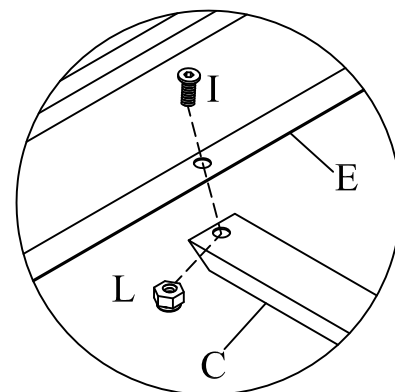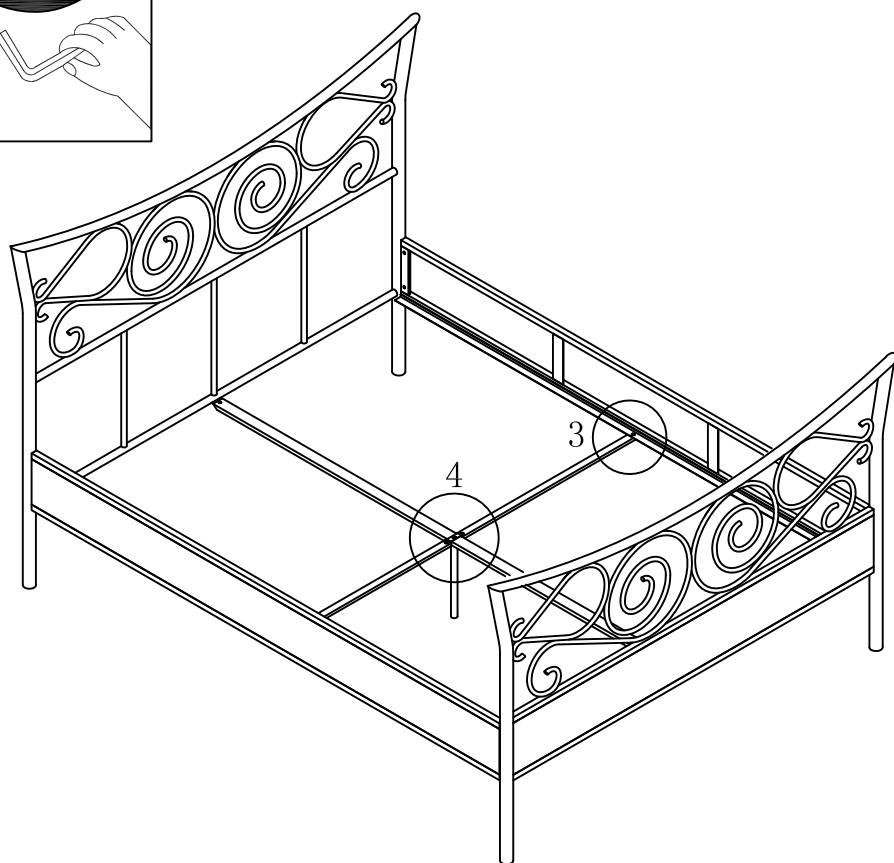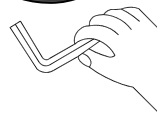

3

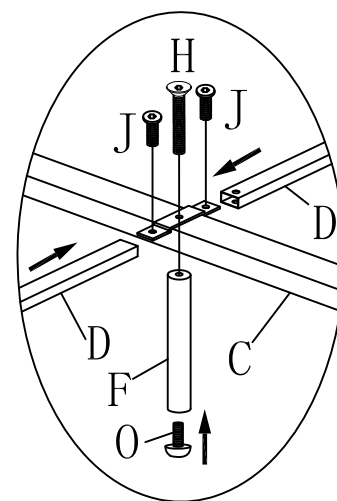

4